


Calibration Pulse Repeater (v1) PLR255

The divider can be changed by changing solder links on PCB- 200 – 169.

There are 3 'jumper positions:-

- JP1 – Units
- JP2 – Tens
- JP3 - Hundreds

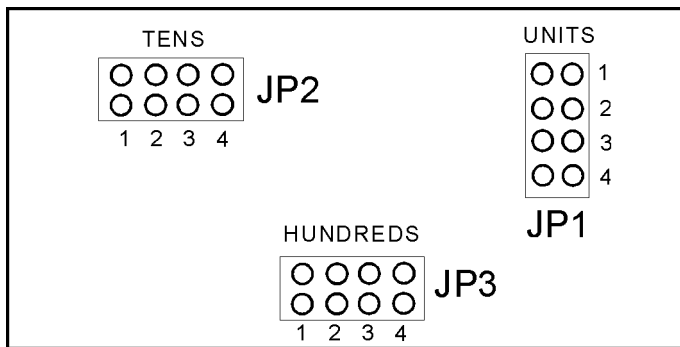

Use the code X = 'link'.

1 2 3 4	dec
- - - -	0
x - - -	1
- x - -	2
x x - -	3
- - x -	4
x - x -	5
- x x -	6
x x x -	7
- - - x	8
x - - x	9

eg. Divide by 275

HUN	TEN	UNIT
1 2 3 4	1 2 3 4	1 2 3 4
- x - -	x x x -	x - x -
2	7	5

In the interest of development and improvement, A.P.C.S. Pty. Ltd. reserve the right to amend, without notice, details contained in this publication. A.P.C.S. PTY. LTD. will accept no legal liability for any errors, omissions or amendments.