


AC ACTIVE CURRENT TRANSDUCER (v4) ACT141

DESCRIPTION


The AC-CURRENT TRANSDUCER ACT141 is a 4-wire active current transducer, designed for AC-current inputs from current transformer or direct load current, matching the Series 100 process control module range. Input spans from 0.5A up to 10A can be manufactured. Offset over entire range is also available (example input 4 - 5Aac, output 0 - 10Vdc). Final calibration is trimmed using the front accessible 'offs' and 'span' 15-turn trim adjustments. Through the use of an internal current transformer input/output isolation up to 2kV is achieved. The output signal level is indicated by a green L.E.D. on the front giving a clear indication of module function, presence of signal and output loop closed (for current outputs only). RF and power transients protection is also standard as with all A.P.C.S. modules. Various power supply choices are available varying from 415Vac down to 8Vdc, all provide power isolation.

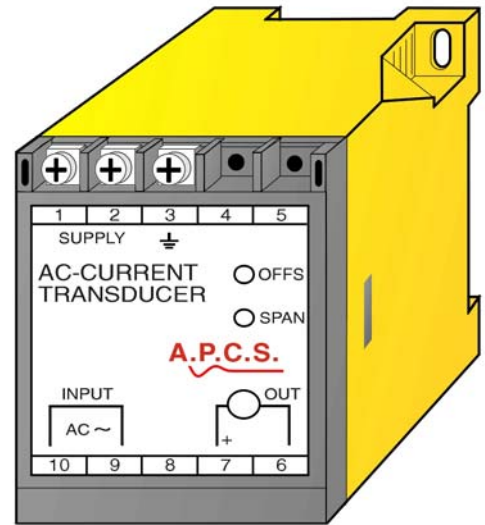

General Specifications

Size:	52 W x 70 H x 110 D (mm).
Mounting:	DIN-Rail, gear plate.
Termination:	Screw terminals on front.
Protection class:	IP40 (IP65 Enclosure opt.).
Weight:	0.300 kg.
Housing material:	Polycarbonate.
Calibration accuracy:	0.2% of span.
Combined linearity and drift error:	0.2% of span.
Accuracy class as per AS1384-1973:	Class 0.2.
Front 'OFFS' adjust:	±20% typical.
Front 'SPAN' adjust:	±20% typical.
Response time:	500ms (typical).
Ambient temperature operating range:	-10...+60°C.
Temperature effect:	0.02% per °C.
Input range:	0.5 up to 10Aac. (40 - 60 Hz sine).
Input impedance:	0.008 Ω at 5A.
Input/output isolation:	2kV r.m.s.
Overload continuous:	150% of rated input.
short term (2 sec):	20 times rated input.
Output loop drive:	1mA into 18k Ω. 10mA into 1.8k Ω. 20mA into 0 - 900 Ω. 50mA into 0 - 360 Ω.
Output load change effect:	less than 0.2% up to max. load.
Output ripple:	less than 0.2%.
Power requirements:	ac supply 4W, dc supply 3W.
Power supply isolation:	2kV r.m.s.
Electromagnetic compatibility:	Complies with AS/NZS 4251.1 (EN 50081.1)

Block Diagram

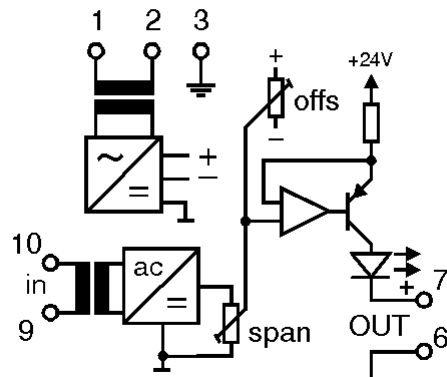

For input / output combinations refer to TYPE NO. DESIGNATION overleaf.

TYPE NO. DESIGNATION

Power Supply:

- | | |
|---------------------------------|------------------------------|
| 1 = 240V, 50/60Hz \pm 10%. | *) 5 = 12Vdc (use '6'). |
| 2 = 120V, 50/60Hz \pm 10%. | *) 6 = 8 - 60Vdc Isolated. |
| 3 = 24V, 50/60Hz \pm 10%. | *) 7 = 48Vdc (use '6'). |
| *) 4 = 415V, 50/60Hz \pm 10%. | *) 8 = 60 - 240Vdc Isolated. |
| | *) 9 = Other (Specify). |

Input (AC-Current only):

- *) 01 = 0 - 0.5A(0.01VA).
- *) 02 = 0 - 1A (0.01VA) please order input 04 and specify 0 - 1A.
- *) 03 = 0 - 2A (0.05VA).
- 04 = Link select 0 - 1A (0.01VA) or 0 - 5A (0.2VA), specify when ordering (5A default).
- *) 05 = 0 - 10A (0.4 VA).
- 06 = Use with APCS external current transformer, specify one of the following and required scaling; 'ECT003' 25A, 'CT004' 100A, 'CCT005' 100A Clamp, 'SCT006' 100A Split Core. All external current transformers must be ordered separately.
- *) 09 = Other (Specify).

Output:

- | | |
|----------------------------------|-----------------------------------|
| 1 = 0 - 5V (50k Ω min). | 6 = 10 - 50mA (360 Ω max). |
| 2 = 0 - 10V (100k Ω min). | 7 = 0 - 10mA (1.8k Ω max). |
| 3 = 0 - 20mA (900 Ω max). | 8 = 1 - 5V (50k Ω min). |
| 4 = 4 - 20mA (900 Ω max). | *) 9 = Other (Specify). |
| 5 = 0 - 50mA (360 Ω max). | |


Action:

- 1 = Direct.
- 2 = Reverse.

Options:

- 0 = None.
- *) 2 = Customised response time (Specify).
- *) 3 = Output ramp.
- *) 4 = External plug-in C/T - PCT001 (up to 25A).
- *) 9 = Other (Specify).

Connection Diagram

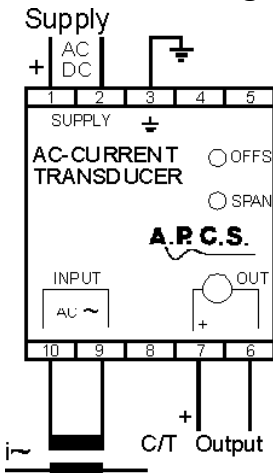


The example shown uses an external current transformer; in many cases this is not necessary as the ACT141 can directly accept up to 10A.

Link Selectable Input 04

When ordered with input 04 the input range can be changed to 1 or 5 amps. To change ranges:

- 1) Disconnect power to unit.
- 2) Unclip housing lid and withdraw unit from housing.
- 3) Set the coding plug to 1 or 5 as required.
- 4) Reassemble unit and connect power.
- 5) Adjust "span" and "offs" pots to recalibrate.
- 6) Change the label information to the new input value.

Section Of Internal Circuit Board

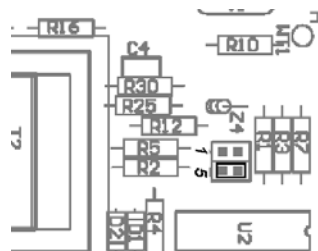

*) Price Extra.

In the interest of development and improvement, A.P.C.S. Pty. Ltd. reserve the right to amend, without notice, details contained in this publication. A.P.C.S. PTY. LTD. will accept no legal liability for any errors, omissions or amendments.